

Digi TransPort® WR21 Hazardous Locations User Guide

User Guide

Digi TransPort® WR21 Hazardous Locations User Guide

90001532

Revision	Date	Description
А	December 2015	First release.
В	June 2017	Added warning that antennas for use in Class I, Division 2 Hazardous Locations must be installed within the end use enclosure. Updated Power Input specification to add minimum wattage. Reordered hardware specification categories. Updated mobile certifications to note Radio Equipment Directive. Updated Emissions/Immunity certification to EN55032.

Trademarks and copyright

Digi, Digi International, and the Digi logo are trademarks or registered trademarks in the United States and other countries worldwide. All other trademarks mentioned in this document are the property of their respective owners. © 2017 Digi International. All rights reserved.

Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International. Digi provides this document "as is," without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

Warranty

To view product warranties online, visit www.digi.com/howtobuy/terms.

Send comments

Documentation feedback: To provide feedback on this document, send your comments to techcomm@digi.com.

Customer support

Digi Technical Support: Digi offers multiple technical support plans and service packages to help our customers get the most out of their Digi product. For information on Technical Support plans and pricing, contact us at +1 952.912.3456 or visit www.digi.com/support.

Contents

Digi TransPort WR21 Hazardous Locations information	
Class I Division 2, Groups A,B,C,D Hazardous Location statement	5

Restriction on use of USB port	5
Digi TransPort WR21 hardware specifications	6

Digi TransPort WR21 Hazardous Locations information

This guide provides information on installing and using Digi TransPort WR21 in hazardous locations, including compliance statements and certifications. For more hardware information for the Digi TransPort WR21, see the **Hardware** section of the Digi TransPort WR Routers User Guide.

Class I Division 2, Groups A,B,C,D Hazardous Location statement

- 4	
-/4	

WARNING!

The Digi TransPort WR21 is suitable for use in Class I, Division 2, Groups A, B, C, D, T4 or non-hazardous locations only.

These devices are open-type devices that are to be installed in a tool only accessible enclosure suitable for the environment.



WARNING!

Explosion Hazard: Do not connect or disconnect equipment when energized. **Avertissement**: Risque d'explosion. Ne pas brancher ni débrancher sous tension.



WARNING!

Explosion Hazard: Substitution of components may impair suitability for Class I, Division 2.

Avertissement: Risque d'Exlposion - La substitution de composants peut rendre ce matérial inacceptable pour les emplacements de Classe I, Division 2.



WARNING

The area must be known to be non-hazardous before servicing/replacing the unit and before installing.

Avertissement: La zone doit être connu pour être non dangereux avant l'entretien / remplacement de l'unité et avant l'installation.



WARNING!

Explosion Hazard: Do not replace power supply unless power has been switched off or the area is known to be non-hazardous.

Avertissement: Risque d'Exlposion - Ne remplace power supply pas d'alimentation eletrique à moins que le pouvoir n'ait été éteint ou on connu que la région soit nonhasardeuse.



WARNING

The USB port is for use in ordinary locations. It is not for use in a hazardous location environment.



WARNING!

Antennas intended for use in Class I, Division 2 Hazardous Locations must be installed within the end use enclosure. For remote mounting in an unclassified location, routing and installation of the antennas shall be in accordance with the National Electrical Codes requirements.

Restriction on use of USB port



WARNING!

The USB port is for use in a normal location only, not a hazardous location.

Digi TransPort WR21 hardware specifications

Category	Specification	Value
General features	Dimensions (L x W x H)	3.9" x 5.2" x 1.3" (10 cm x 13.1 cm x 3.2 cm)
	Weight	0.85 lbs.
	Other	Standard dual SIM (SIM protection cover option)
RF features		
GSM models	GPRS	GPRS Class 10 Quad band 850/900/1800/1900 MHz
	EDGE	GPRS Class 10/EDGE Class 10 Quad band 850/900/1800/1900 MHz
	HSDPA/HSUPA/UMTS	850/900/1900/2100 MHz with Rx Diversity
CDMA models	CDMA/EV-DO Rev A	Dual band 800/1900 MHz with Rx Diversity Optional multi-mode GSM/ EV-DO Gobi support 450 MHz, 3.1 Mbps down / 1.8 Mbps up R-UIM support
Power requirements	Power input	9-30 VDC; 18 W minimum
	Power supply	100-240 VAC 50/60 Hz with barrel connector Optional barrel connector with bare wire leads
	Power consumption	6 W @ 12 VDC
Environmental	Operating temperature (ambient temperature)	-20° C to +55° C; -35° C to +75° C with reduced cellular performance
	Relative humidity	20% to 95% (non-condensing)
	Ethernet isolation	1.5 kV
	Serial port protection (ESD)	1.5 kV

Category	Specification	Value
Approvals	Emissions/Immunity	CE FCC Part 15 Class B AS/NZS CISPR 22 EN55032 Class B EN55024
	Safety	Hazardous Locations: ANSI/ISA-12.12.01-2015 CAN/CSA C22.2 NO.213-15 Ordinary Locations: UL 60950-1, 2nd Edition, 2014-10-14
	Mobile Certifications-GSM/UMTS	RE Directive (Radio Equipment Directive) EN 301 511
	Mobile Certifications-CDMA/ EV-DO	CDG TIA/EIA-690 CDG TIA/EIA-98-E
	Wireless Carrier Certifications	Certified by most major carriers. See www.digi.com for current listing.