



# Quick Start Guide

Digi One™ IAP, Digi One™ IA, Digi One™ IAP HAZ



## 1 Welcome to your Digi product

**Get started:** This guide helps you with initial product setup. Need more? Find additional supporting material for this product at [www.digi.com/products/serial-servers/digioneiapfamily](http://www.digi.com/products/serial-servers/digioneiapfamily). Or connect to the online documentation by scanning this code:




**Digi Technical Support:** Digi offers multiple support plans to help you get the most out of your product. For information on Technical Support plans and pricing, contact us at 877.912.3444 or visit [www.digi.com/support](http://www.digi.com/support).

**Documentation feedback:** To provide feedback on this documentation, send your comments to [techcomm@digi.com](mailto:techcomm@digi.com).

## 2 Verify your components

### Included equipment

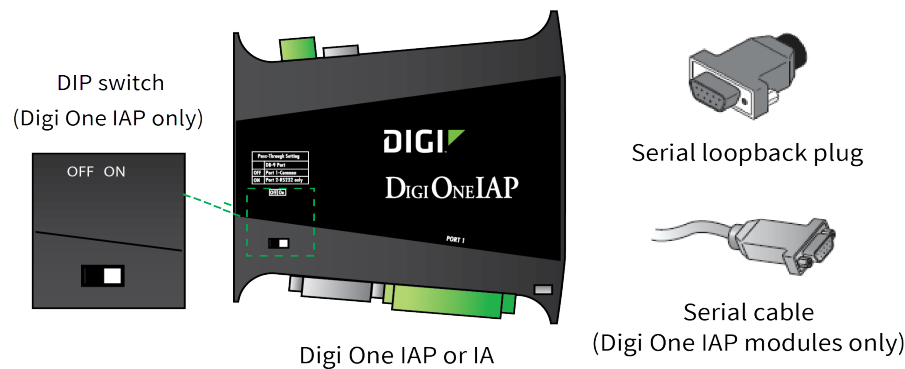

Verify that you have all included equipment. If any item is missing or damaged, contact your supplier.

**Note** A loose label sticker that includes the unique device password is included in the box. Retain this label sticker with your hardware records. This default password will be needed if the device is factory reset and you want to access the web UI on the device.

## 3 Set the DIP switch or screw-terminal pins

Set the serial DIP switch according to your serial device requirements (EIA-232/422/485). The pinouts are on the back of the device.

### Switch setting

Digi One IAP only: Set pass-through settings.


See the graphic in section 2, **Verify your components**, for the location of the DIP switch.

Switch position	Port 1 screw term	Port 2 DB-9	Flow control
ON	Follows switch (232/422/485)	RS-232 only	Hardware flow control supported
OFF	Follows switch (232/422/485)	Follows switch (232/422/485)	Hardware flow control supported

Standard	Switch 1	Switch 2	Switch 3	Switch 4
EIA-232	Up	Down	Down	Down
EIA-422-485 Full-duplex	Up	Down	Down	Up*
EIA-485 Half-duplex	Up	Down	Down	Up*

If switch 4 is up, the termination resistor is connected. If switch 4 is down, the termination resistor is not connected.

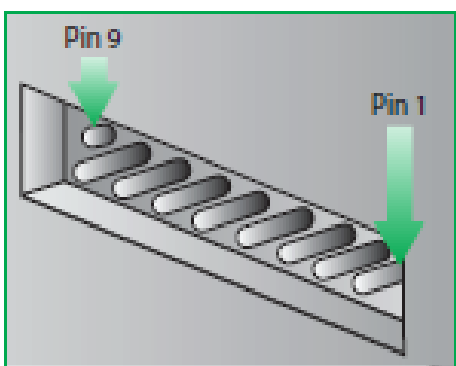


DB-9	RS-232	RS-422/485 Full-duplex	RS-485 Half_duplex	Screw term
2	RxD	RxD+	RxD+	6
3	TxD	TxD+	TxD+	3
7	RTS	RTS+	Not used	1
8	CTS	CTS+	Not used	8
5	GND	GND	GND	5
6	DSR	RxD-	RxD-	7
1	DCD	CTS-	Not used	9
4	DTR	RTS-	Not used	2
9	NA	TxD-	TxD-	4

---

## 4 Connect the hardware

1. Connect the serial cable (DB-9 shown).
2. Connect the Ethernet cable (not provided).
3. Connect the power source.

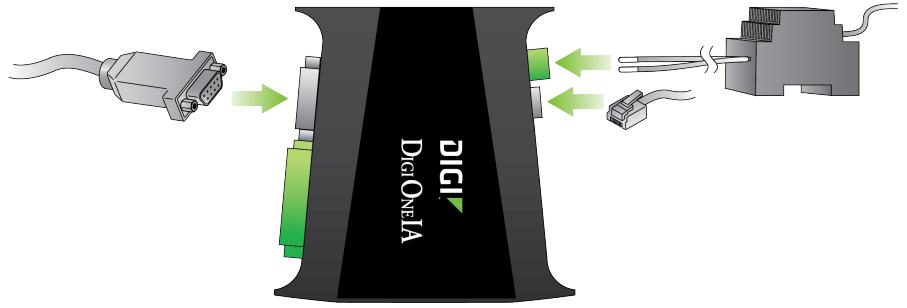

### Ethernet link LED

- Green = good link
- Off = no link

---

**Note** Wiring terminals should be tightened to 5 inches per pound. Use copper conductors only.

---

**LEDs and startup status:** All LEDs flash on startup.

- **Power LED:**

Off: No power.

On: Illuminated when power is applied.

- **Link LED:**

Solid: Device detects an active network connection.

- **TX and RX:**

Flashing: Indicates normal network traffic.

- **DIAG LED:**

Not flashing/off: IP address is assigned.

Steady blinking: Waiting for IP address to be assigned.

---

## 5 Download required documentation and software

To find documentation and software for this product, navigate to [www.digi.com/products/serial-servers/digioneiapfamily](http://www.digi.com/products/serial-servers/digioneiapfamily) and click the **Product Support** tab.

Digi provides several utilities that discover and configure devices on a network. Download the appropriate utility to get started.

1. Click the **Utilities** tab.
2. Select your operating system. A list of available utilities for your operating system appears.
3. Download and run either the **Device Discovery Utility** or **Digi Port Authority - Remote**.

If the serial ports for your product will be managed using Digi's RealPort software, download the driver.

1. Click the **Drivers** tab.
  2. Select your operating system. A list of available downloads and release notes for your operating system appears.
  3. Download the RealPort driver and the release notes.
- 

**Note** For Microsoft Windows operating systems, unzip the download package and run the executable. For Linux or UNIX operating systems, follow the instructions in the release notes.

---

## 6 Configure the serial ports

Open the *Digi One IAP Family User Guide* at [www.digi.com/resources/documentation/digidocs/pdfs/90000263.pdf](http://www.digi.com/resources/documentation/digidocs/pdfs/90000263.pdf).

1. Open the **Digi Discovery Utility** or **Digi Port Authority - Remote** web interface. A login prompt appears.
  2. Enter the default user name (**root**) and the unique default password printed on the device label. If a password is not printed on the label, the default password is **dbps**. If neither of these passwords work, your device may have been updated. Contact your system administrator.
  3. In the list of discovered devices, select the device to configure. Configure the IP address, if necessary.
  4. Go to **Applications > Industrial Automation > Launch the Industrial Automation Wizard**.
  5. Follow the prompts to complete the configuration.
- 

**Note** To configure products to use industrial protocol profiles, see the *Digi One IAP Family User Guide* at [www.digi.com/resources/documentation/digidocs/pdfs/90000263.pdf](http://www.digi.com/resources/documentation/digidocs/pdfs/90000263.pdf).

---

## 7 What's next?

You can also find additional information at [knowledge.digi.com](http://knowledge.digi.com) and the Digi forum at [www.digi.com/support/forum/](http://www.digi.com/support/forum/).