

Quick Start Guide

Digi Connect® ES®



Welcome to your Digi product


Get started: This guide helps you with initial product setup. Need more? Find additional product support at www.digi.com/support/DigiConnectES. Or connect to the online documentation by scanning this code:



Digi Technical Support: Digi offers multiple support plans to help you get the most out of your product. For information on Technical Support plans and pricing, contact us at 877.912.3444 or visit www.digi.com/support.

Documentation Feedback: To provide feedback on this documentation, send your comments to techcomm@digi.com.

1 Verify your components

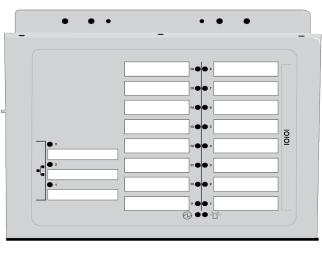


Included equipment





Hospital-grade power cord



Hardware manual CD





ConnectPort ES

DB-9 RJ-45 converter


Rubber feet (for desktop mounting)

Loopback plug

Verify that you have all included equipment. If any item is missing or damaged, contact your supplier.

Note A loose label sticker that includes the unique device password is included in the box. Retain this label sticker with your hardware records. This default password will be needed if the device is factory reset and you want to access the web UI on the device or register the device with Digi Remote Manager®. If the device was already registered with Remote Manager at the time of the factory reset, you do not need the unique password to access the device in Remote Manager.

2 Identify the hardware

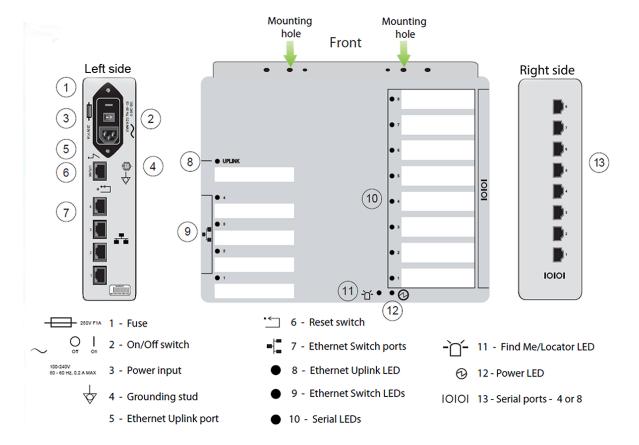


3 Connect the hardware

- 1. Insert the screws into the mounting holes and mount the device on the wall.
- 2. Connect the power supply.
- 3. Connect the Ethernet cable.

Note Additional devices can connect to the Ethernet through additional ports. (Not available on all models.)

4. Push power switch to turn on the device.

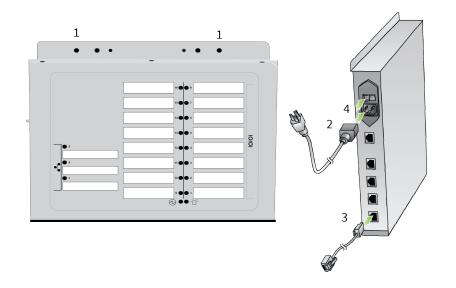

4 Download the required software

You will need to download either **Digi Discovery Utility** or **Digi Port Authority - Remote**.

- 1. Navigate to www.digi.com/support/DigiConnectES.
- 2. Click **Diagnostics**, **Utilities**, and **MIBs**.
- 3. Select your operating system.
- 4. Download and run either Digi Discovery Utility or Digi Port Authority Remote.
- 5. Open the web interface. In the Digi Device Discovery Utility, click **Open web interface**. In Digi Port Authority-Remote, click **Device Configuration**.
- 6. A login prompt for the web interface appears. Enter the default user name and password.
 - User name: root
 - **Password**: Enter the unique default password printed on the device label. If a password is not on the label, the default password is **dbps**. If neither default password works, the password may have been updated. Check with your system administrator.
- 7. Configure your device as needed.

For more information, see the Digi Connect ES support page at www.digi.com/support/DigiConnectES.